



103835AL01
103835GL01
103835A001
103835DA01
1038352431
1038352432
Simplicity Square Bath Spout
A10入墙出水口

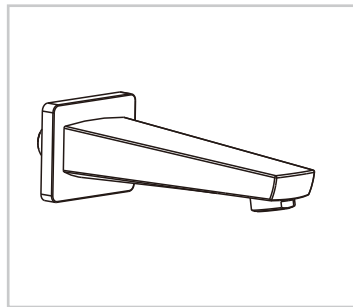

American Standard

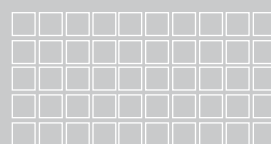

Installation &
Operation Instructions
安装/使用说明书

Thank you for selecting American Standard the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

* American Standard continually improves our product design and performance and reserves the right to modify the dimension and specification of our product accordingly without any prior notification.

* Actual dimensions and specifications may vary, refer to physical product for exact dimensions and specification.

感谢您选购美标洁具 - 拥有百年优质水准的产品, 为保证安装顺利, 请在进行安装前细阅以下指南

* 美标公司一贯奉行不断提高和改善其产品设计性能的政策, 并保留对其产品规格更改的权力, 届时, 恕不另行通知。

* 本指南仅供安装和使用作参考, 产品以实物为准。

Pre-Installation Checks 安装前注意事项

* Remove all impurities from pipes before installation to avoid clogging.

* Check installation distances shown in the dimension diagram to ensure correct installation.

Conditions for use

* Water pressure condition: 0.05~0.75MPa (Recommended water pressure condition: 0.1~0.5MPa)

* Ambient temperature: 1~55°C

* Water temperature: 4°C ~ 90°C (Recommended hot water temperature 50~60°C)

* Steam should not be used with product.

* Note: Ensure water source is clean. Poor water quality can cause cartridge and internal components to clog, resulting in poor volume control and/ or product failure.

* 安装之前, 请务必清理管中杂物, 以免造成堵塞。

* 参考尺寸图, 检查安装尺寸, 确保安装正确。

使用条件

~ 使用水压 (包括冷水与热水压力): 0.05~0.75兆帕, 推荐使用水压: 0.1~0.5兆帕。

~ 使用环境温度: 1~55°C。

~ 使用水温度: 4°C~90°C, 建议使用热水的温度为50~60°C。

~ 不可使用蒸汽。

~ 使用水源: 市政饮用水。(请确保水源清洁, 低质量的水会导致阀芯或内部组件堵塞, 影响产品性能。)


Recommended Tools and Materials 推荐的工具和材料



Teflon Tape
密封带

Dimension 基本尺寸图


Unit: mm
单位: 毫米

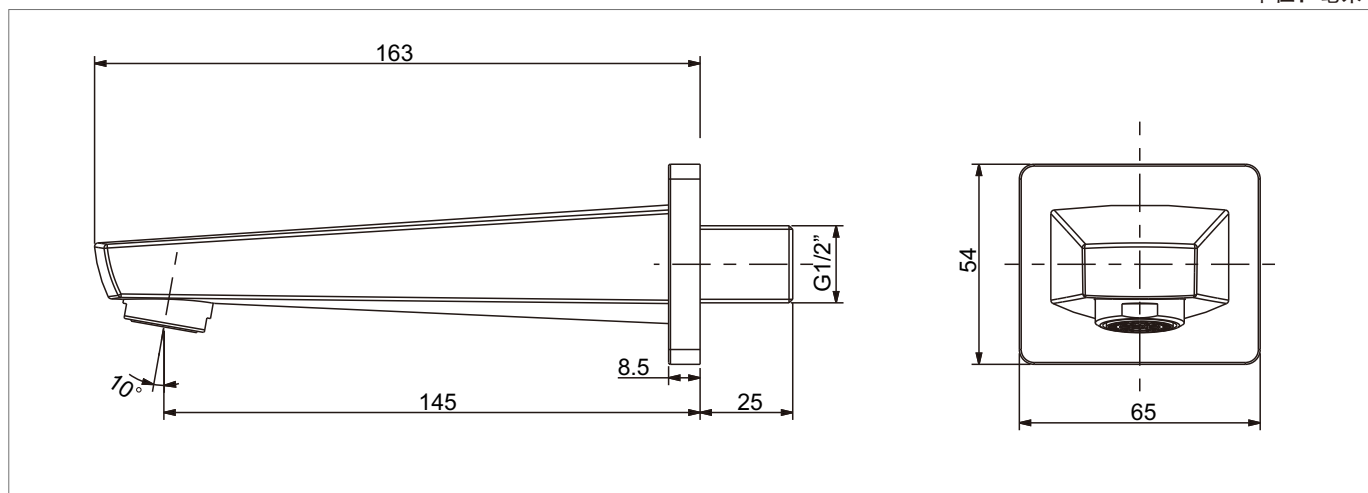


Parts List 零件明细

Parts List 零件明细表


| 序号 No. | 零件名称 Part Name | 数量 Q'ty |
|-----------|-------------------|------------|
| 1 | Screw 螺丝 | 1 |
| 2 | Escutcheon 孔罩 | 1 |
| 3 | Spout 出水口主体 | 1 |
| 4 | Aerator 起泡器 | 1 |

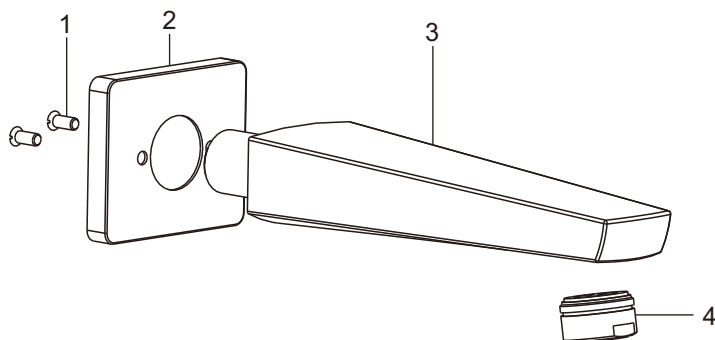

Installation 安装部分

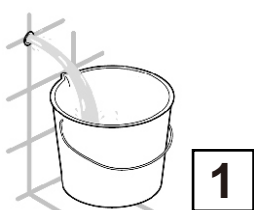


- * Lay water supply pipeline based on dimension drawing.
- * Before installation, the laying of pipeline is rinsed clean.
- * 参考尺寸图，铺设供水管路。
- * 安装前，请将铺设的管路冲洗干净。

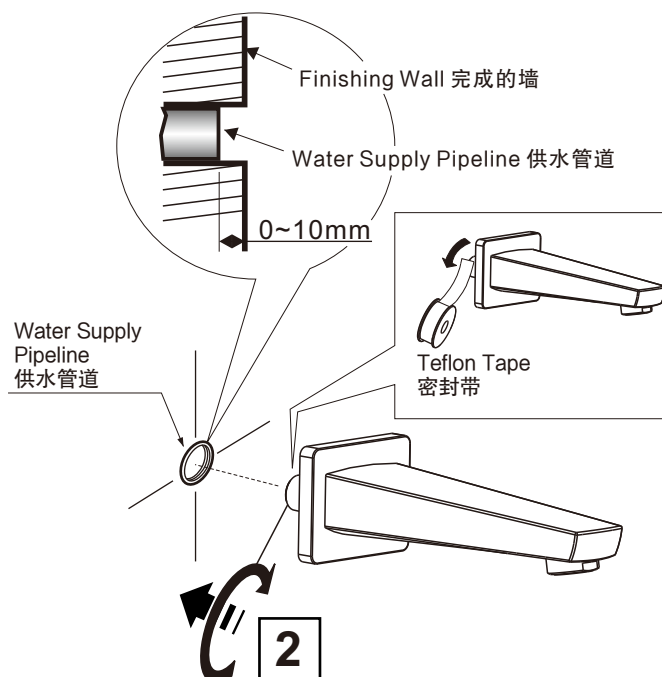

Care & Maintenance 维护与保养

* Clogged aerator due to poor water quality can lead to reduced water flow. Follow steps below to clean aerator to ensure optimal performance.

* 起泡器可能积累污垢致损害或影响出水效果，此时应清洁或更换起泡器。

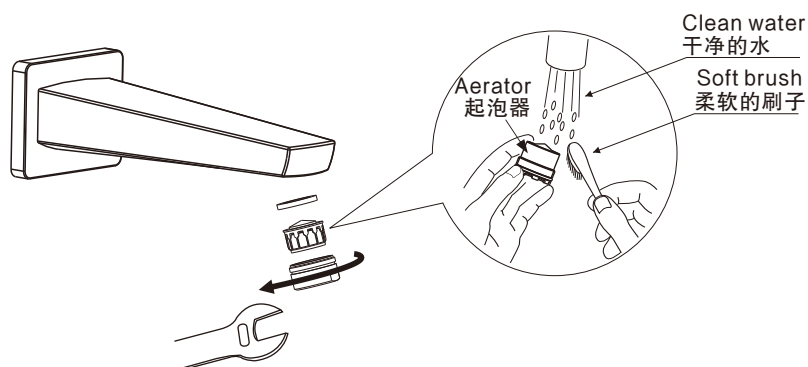

Attention:
Please leave manual with customer post installation.

安装者注意:
安装完成后，请将此说明书留给用户。