

为了安全请务必遵守


- 在使用时为避免发生不必要的事故或故障, 特提出以下注意事项:
- ◆ 在安装、使用便器之前, 请先阅读以下项目, 正确理解之后再行安装、使用。
 - ◆ 专业修理者以外的人员, 请不要进行拆卸、修理、改造本产品。
 - ◆ 本产品已做抗菌处理, 清洗时请勿使用强酸强碱物质, 以免破坏抗菌涂层。
 - ◆ 施工结束后, 在确认各部件能否正常工作的同时, 并向用户说明使用和保养的方法。
 - ◆ 请将本说明书交于最终用户保管, 以备查阅。

安装使用前的注意事项


- ◆ 陶瓷属于易碎品, 安装前请先确认是否有因运输不当产生的破损。
- ◆ 安装时请按先排水分离器后坐便器的顺序进行安装。(具体步骤参照便器安装方法)
- ◆ 安装中或安装完毕后, 请确认是否有因安装不当产生的破损。
- ◆ 因不正确安装和使用不当而发生的事故, 本公司将不予以承担责任, 敬请客户谅解。

1. 基本尺寸

单位: 毫米

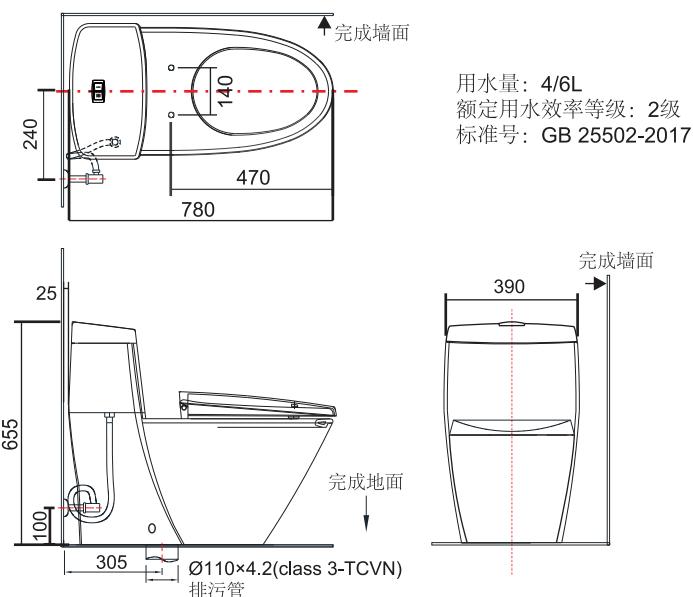

2. 部品确认 (包装内容的确认)

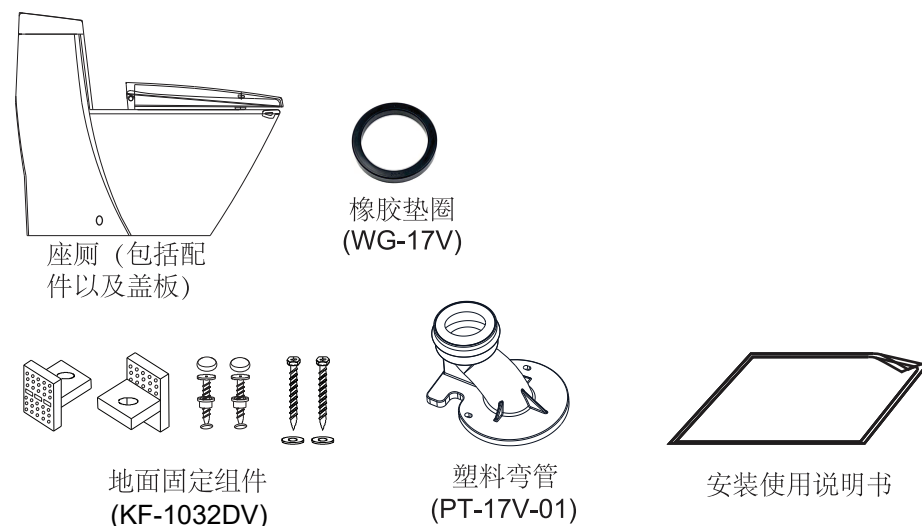


3. 推荐工具和材料 (客户自备)



4. 安装弯管


4.1. 如图所示, 地面到排污管顶端的距离是4-5毫米。排污管的直径是110毫米, 排污孔道墙面的距离是305毫米。(如图所示)

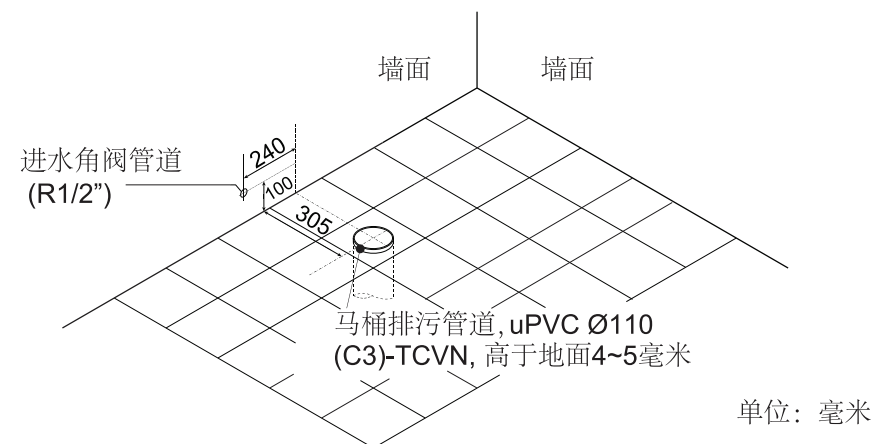

4.2:


- 将弯管放到排污管上, 对准后在两孔做打孔记号。

- 拿掉弯管, 在地面上记号处打2个Φ8的孔, 然后在两个孔里预埋膨胀螺栓。(如图所示)

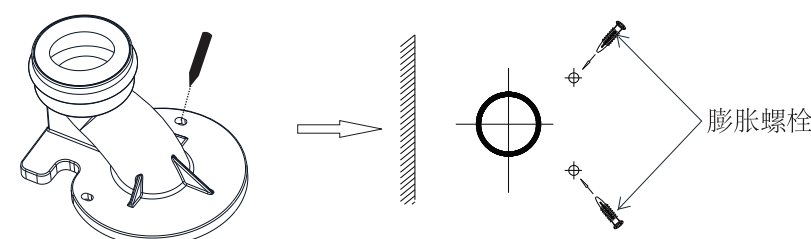


4.3:

- 如图所示将橡胶垫圈套到排污管上:

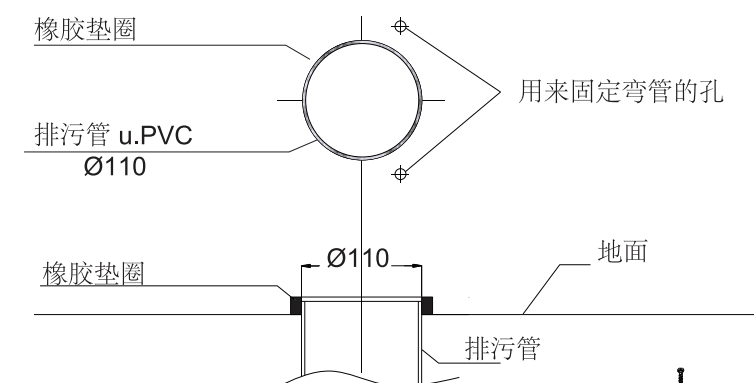


- 将弯管放到排污管上, 根据步骤4.2安装好的膨胀螺栓校准。

- 安装固定装置, 如图将弯管固定于地面上。

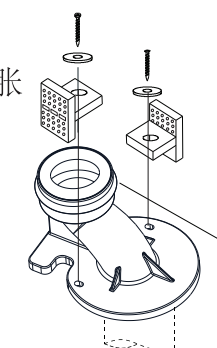


5. 安装座厕

5.1: 如图所示, 将座厕的排污口对准预安装好的塑料排污弯管, 放好坐厕。

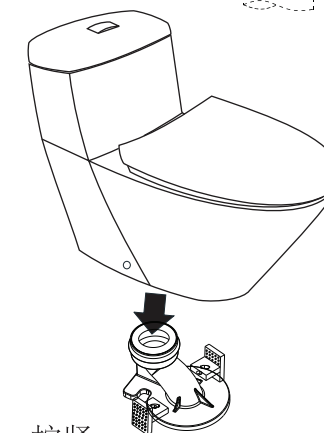


5.2. 按照图示安装垫片, 螺丝和螺栓帽, 拧紧。

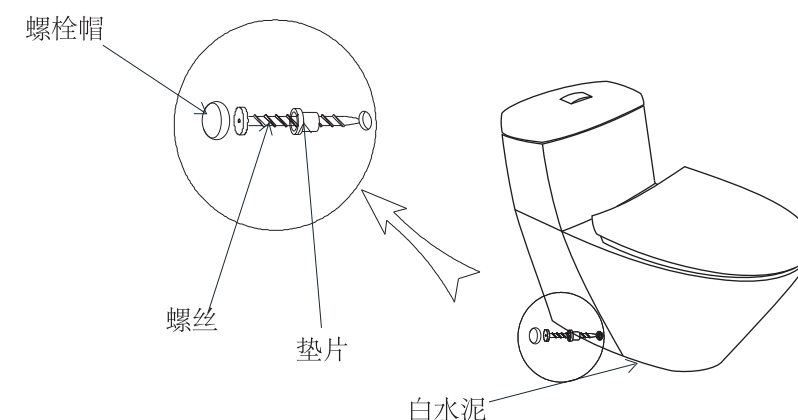

5.3. 为了方便清洁, 只需在座厕底部边缘涂上矽胶。


6. 连接供水软管

- 清洁管道并确保没有污垢，否则这些污垢将使管道堵塞，特别是刚装上的管道。
- 将角阀按照图示装到墙壁上，然后将供水软管连接到座厕的进水阀上，检查漏水。进水阀的水必须是打开的，以确保随时能上厕所用。(本产品不含进水控制角阀和软管)

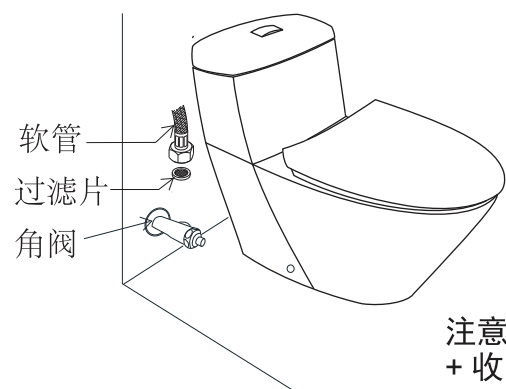



7. 清洁与保养

一般可用软湿的布来清洁塑料部分。请勿使用不适合的清洁剂(厕所清洁剂、住宅用清洁剂、漂白剂、苯、涂料稀释剂、去污粉、甲酚等)。

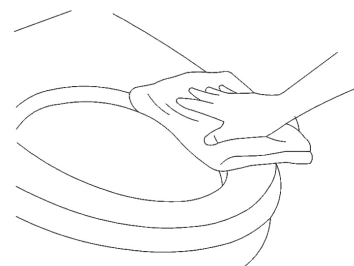

7-1. 盖板的安装


如图使用螺丝刀安装盖板。

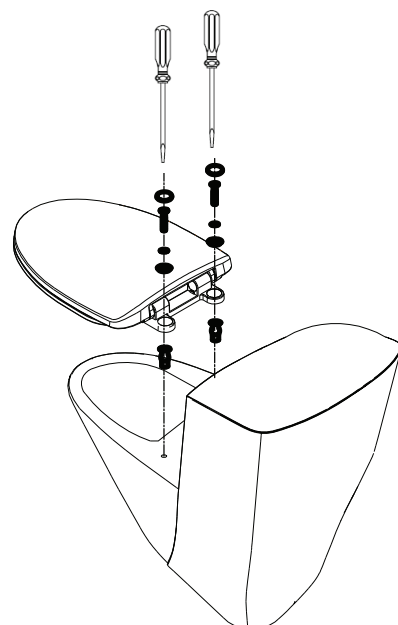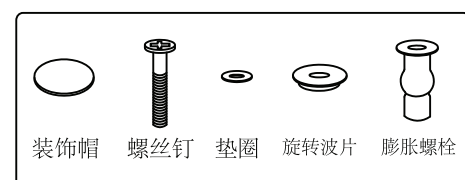


8. 警告及注意事项

下列注意事项如有使用不当，可能造成重大的意外事故。下列内容均与安全密切相关，请您务必遵守。


8.1. 请勿蹬踏座厕。
*否则容易引发破损，造成人身伤害。

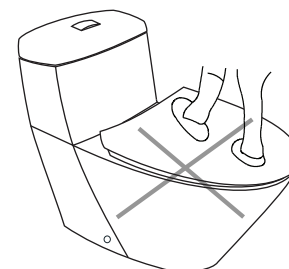

8.2. 请勿将供水软管折弯或损坏。请勿用手撑在供水角阀上或蹬踏供水角阀。
*否则容易引起漏水和室内积水。

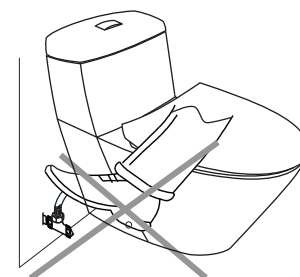

8.3. 请不要将座厕放于阳光直射的地方，火炉旁边或者有高温来源的地方。
*否则塑料部位可能会变色。

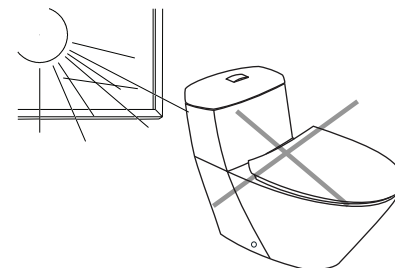

8.4. 清洁保养塑料部分时，请勿使用不适合的清洁剂（厕所清洁剂、住宅用清洁剂、漂白粉、苯、涂料稀释剂、去污粉、甲酚等）。
*否则塑料部分开裂可能会造成人身伤害。




8.5. 请勿背靠盖板上。
*否则有造成盖板划伤和损坏的危险。




D ☎ +49 571 39 89 333 service.de@grohe.com	EST LT LV ☎ +372 661 6354 grohe@grohe.ee	N ☎ +47 22 07 20 70 grohe@grohe.no	T ☎ +6629014455 grohe-thailand@lixil.com
A ☎ +43 1 6 80 60 info-at@grohe.com	F ☎ +33 1 49 97 29 00 sav-fr@grohe.com	NL ☎ +31(0) 88-0030700 https://www.grohe.nl/nl/onze-service/contact.html	TR ☎ +90 216 441 23 70 groheturkey@grome.com
AUS ☎ 1800 080 055 customer.care@reece.co.m.au	FIN ☎ +358 (09)42451390 grohe@grohe.fi	NZ ☎ +64 09 573 0490 sales@robertson.co.nz	UA ☎ +380 (44) 5375273 info-ua@grohe.com
B ☎ +32 (0)2 899 3077 https://www.grohe.be/nl/be/onze-service/contact.html	GB ☎ +44 208 283 2840 info-uk@grohe.com	P ☎ +351 234529620 comercial-pt@grohe.com	USA ☎ +1 800 4447643 Grohetechcare@lixil.com
BG ☎ +359 2 971 99 59 info-bg@grohe.com	H ☎ +36 (06)1 238-8045 info-hu@grohe.com	PL ☎ +48 (22) 5432640 biuro@grohe.com	VN ☎ (+84) 1800 6624 cskh@lixil.com
BR ☎ 0800 770 1222 falecom@lixilamericas.com	HK ☎ +852 2969 7067 info@grohe.hk	RI ☎ 0800-1-047-643 customer-care-indonesia@lixil.com	AL BiH HR KS ☎ +385 1 2911470 adria-hr@grohe.com
CAU ☎ +99 412 497 09 74 info-az@grohe.com	I ☎ +39 2 959401 info-it@grohe.com	RO ☎ +40 021 212 50 50 info-ro@grohe.com	CY M IL GR ☎ 800 11111 info@grome.com
CDN ☎ +1 888 6447643 info@grohe.ca	IND ☎ 18001024475 customer-care.in@grohe.com	RP ☎ +63 2 89288000 service_center@wilcon.com.ph	UAE Q KWT ☎ +971 4 4214557 grohedubai@grome.com
CH ☎ +41 44 877 73 00 info@grohe.ch	IS ☎ +354 515 400 jonst@byko.is	ROK ☎ +82 2 1588 5903 info-singapore@grohe.com	BRN OM PK ☎ +971 4 4214557 grohedubai@grome.com
CN ☎ +86 4008811698 info.cn@grohe.com	J ☎ +81-3-6748-1180 info_grohe@blisspajapan.jp	RS ☎ 8 800 200 00 49 service-ru@grohe.com	KSA RL JOR IRQ ☎ +966 11 4551667 groheksa@grome.com
CZ ☎ +42 07 21 71 66 73 info-cz@grohe.com	KZ ☎ +7 775 007 05 27 service-kz@grohe.com	RP ☎ +63 2 89288000 service_center@wilcon.com.ph	ET MA DZ TN ☎ +202 226147988/98 grohecairo@grome.com
DK ☎ +45 44 65 68 00 grohe@grohe.dk	MAL ☎ 1800 80 6570 customerservice.my@lixil.com	S ☎ +46 771 14 13 14 grohe@grohe.se	NGR ☎ +202 226147988/98 grohecairo@grome.com
E ☎ +34 93 / 3 36 88 50 grohe@grohe.es	MX ☎ 01 800 839 1200 info@lixilamericas.com	SGP RC ☎ +65 6311 3611 grohe@connectcentre.sg	Far East Area Sales Office: ☎ +65 6311 3600 info@grohe.com.sg
		SK ☎ +420 (2) 77004192 info-sk@grohe.com	Latin America: ☎ +52 818 3050626 info@lixilamericas.com

www.grohe.com
2022/04/12


1.Installation drawing

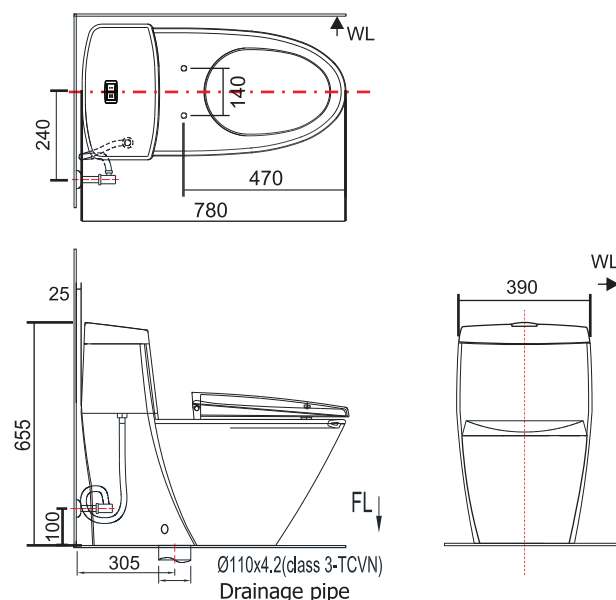

2.Detail of product.

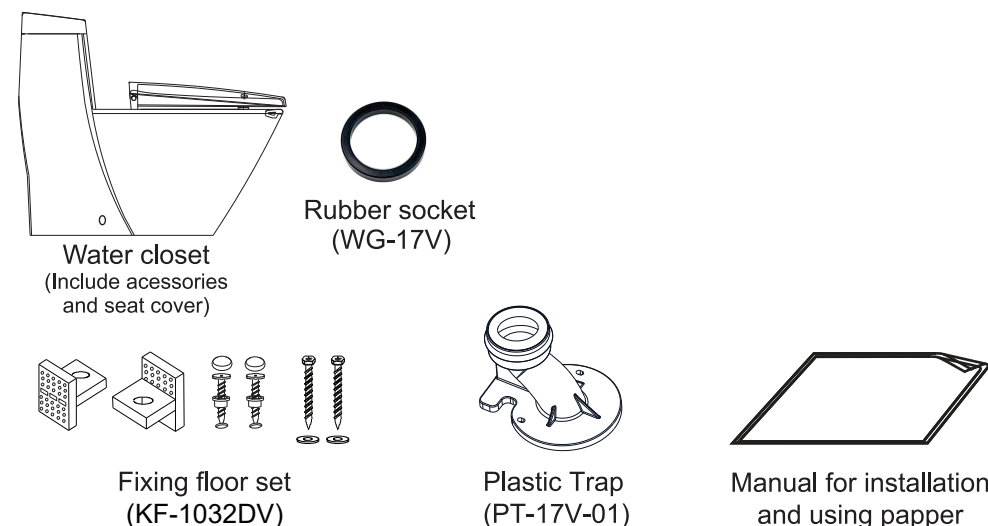


3. Tools and equipments.

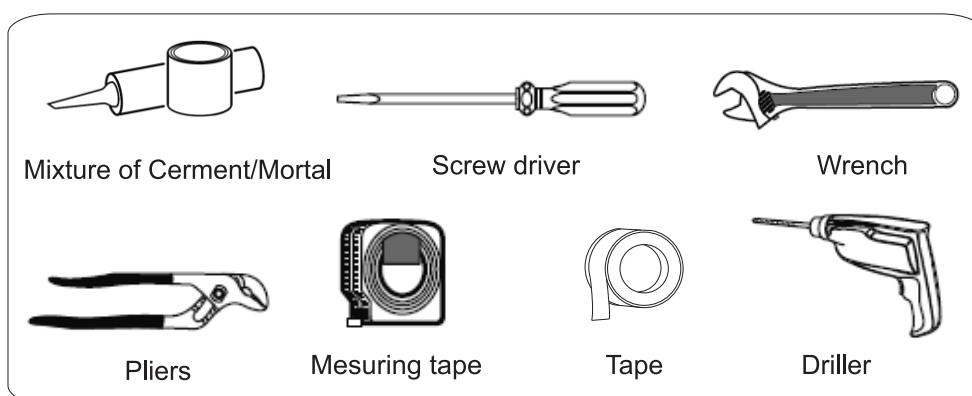


4. Install P-trap.

4.1. The distance from floor to top side of drainage pipe is 4 - 5 mm. Diameter of drainage pipe is 110mm and distance from center of hole to wall is 305mm (as the figure).

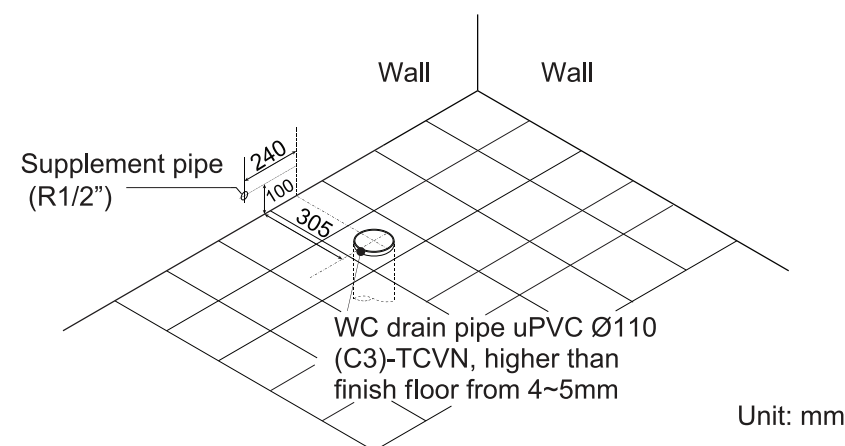


4.2:

- Put the drainage base on the drainage pipe, draw the deformation of drainage base and mark the position of 2 drainage-base-fixing holes.
- Drill two holes $\Phi 8$ on the floor, to the drainage pipe, as the figure, after that place a plastic plug (see attachable components) into the 2 newly drilled holes:

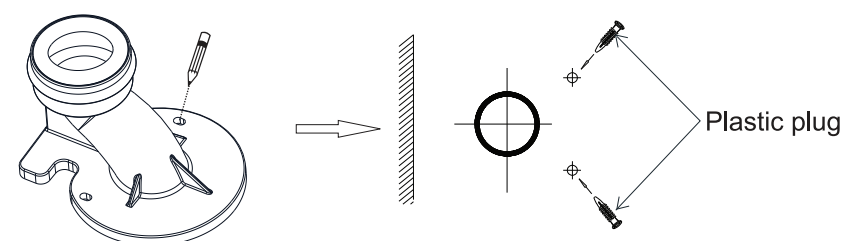


4.3:

- Put rubber gasket around drainage pipe as in the picture:

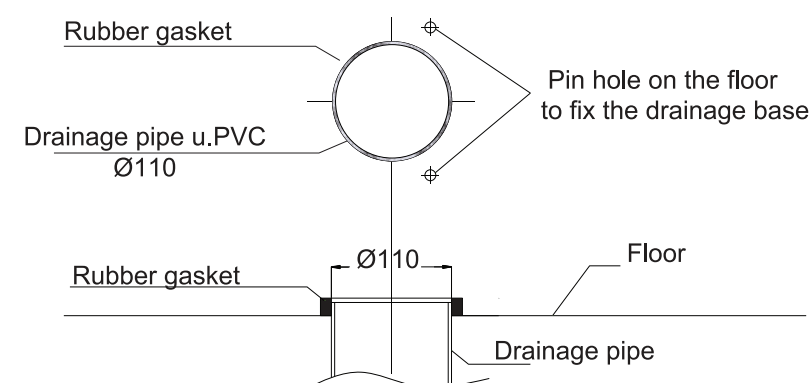


- Put the drainage base on the floor following the deformation mark and pin holes made in step 4.2
- The screw shall be fitted with the plastic plug which were inserted on the floor.

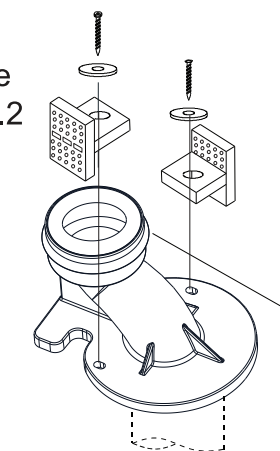


5.Install toilet bowl.

5.1: To place the toilet seat on the trap so that the outlet of the toilet bowl inserts into the mouth of the trap:

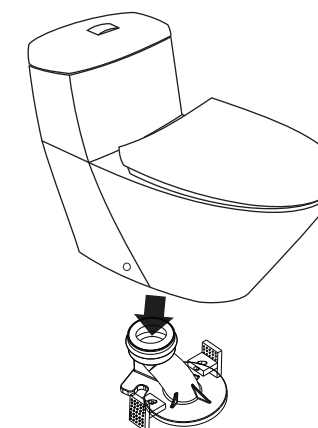


5.2: To unleash the plastic cap of the screw fixed to the body of toilet bowl, then fastening it into the seat through 2 holes on the body of toilet bowl, after tightening the screw, drive the plastic

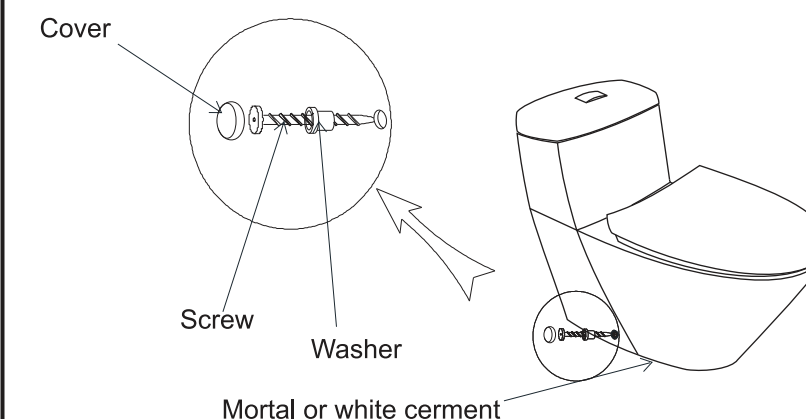

5.3: In order to wash floor easily and to keep it clean, only use silicon to plaster into slits around the seat between its bottom seat and the floor.

6. Supply of water to the toilet.


- To clean the pipe to ensure that it doesn't get soil, sand, trash, etc., that may clog the fill valve, especially for the pipes which have just been installed.
- To turn the lock valve into the head of supply of water pipe on the wall, after that connect the head of lock valve to the toilet bowl through the pipe, the stop valve must stay opened to ensure that water is ready for the toilet. (Stop valve and flexible hose set are not supplied in the packaging)

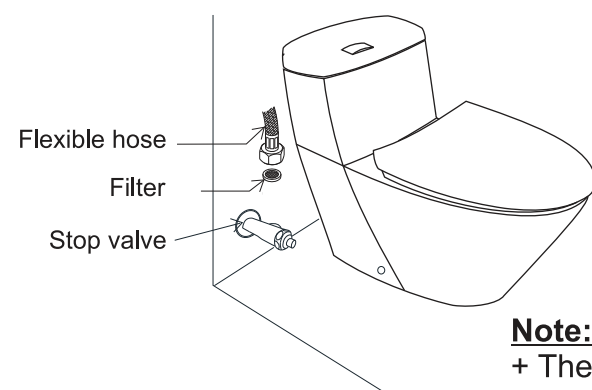

7. Maintenance water closet.

Usually clean plastic parts of product by soft and wet leather.

Do not use any unsafe detergent (toilet detergent, floor detergent, cleanser, benzene, washy paint, washing powder, clezola, etc)

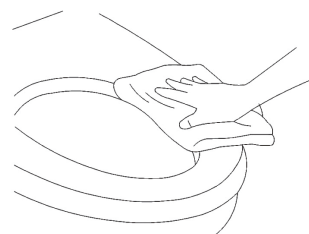

8. STEPS FOR SAFETY

The following instructions should be observed to avoid damage for the toilet:

8.1: Not to stand on it.

*That is cause damage for seat & Cover

8.2: Don't kick strongly at the flexible hose, or else it can be damaged it or cause leak.

8.3: Don't place the toilet directly under the sunlight, near the fireplace, heat source, or else the plastic parts might turn fade.

8.4: To preserve the parts of plastics, don't use any unsafe detergent (toilet detergent, floor detergent, cleanser, benzene, washy paint, washing powder, clezola, etc.)

Don't use detergent, bleaches, benzen, watery paint, clezola, etc., to clean plastic parts.

8.5: Don't sway yourselves when using the toilet, which can damage the toilet.


Note:

Ceramics are easily broken things.

- Before putting up parts together, make sure that they are not damaged.
- After assembly has been finished, check the set to see whether damage occurs during assembly
- * Damage set may:
 - Cause harm to users.
 - Dirty floor with water.


ATTENTION

- In order to ensure safety and proper assembly, please read the following carefully.
- In order to avoid damage to the set of flush, you shouldn't re-adjust its inner parts
- In order to ensure the operational effectiveness of the flush set, the water level shouldn't be less than 0.3kgf/cm (equivalent to the height of water level of 3m)
- After a long service, if the flow of water into the tank is choked up or noticeably hindered, the filter plate should be removed for cleaning.
- When putting the ceramic part on the metal nut and bolt, please tighten the nut properly. If the nut is tightened too closely, it may damage the ceramic part.
- Cleaning the water pipes indoors by flushing water for a few minutes so that sand and waste things may be driven out (especially for newlybuilt houses with new water pipes)
- When the water main becomes clean, please connect the main to the water tank. If sand and broken things are clogged up inside the pipe they might make the filter plate less effective or leaked..

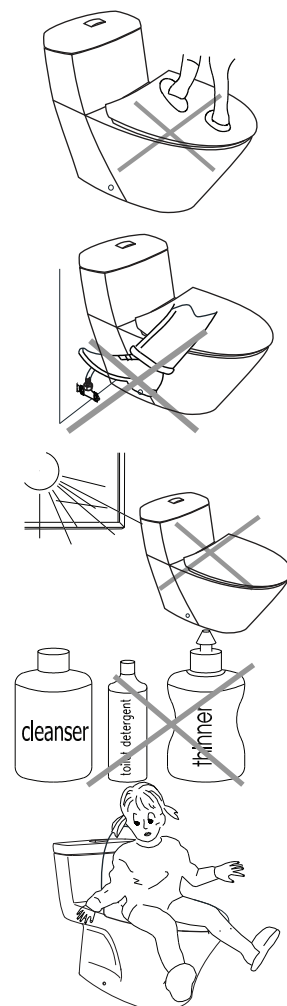

7-1 Install Seat & Cover

Use screw driver to install Seat & Cover

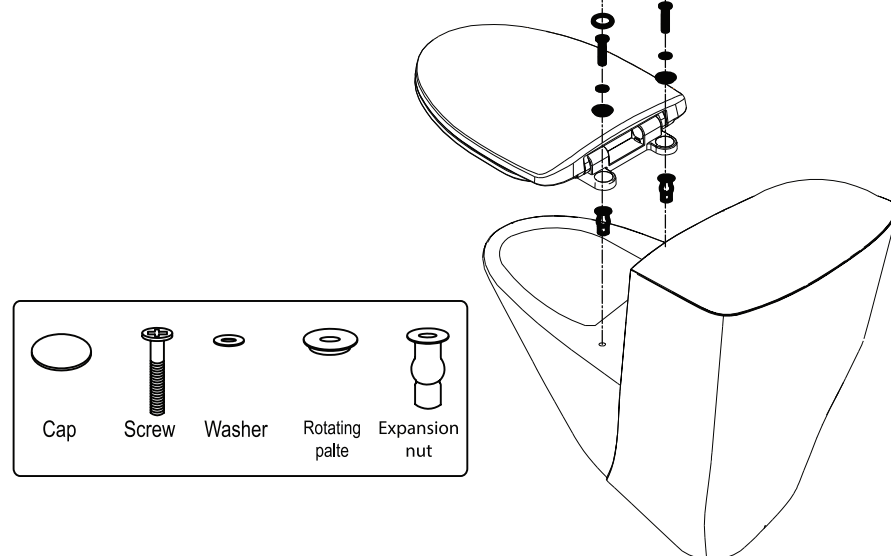

D ☎ +49 571 39 89 333 service.de@grohe.com	EST LT LV ☎ +372 661 6354 grohe@grohe.ee	N ☎ +47 22 07 20 70 grohe@grohe.no	T ☎ +6629014455 grohe-thailand@lixil.com
A ☎ +43 1 6 80 60 info-at@grohe.com	F ☎ +33 1 49 97 29 00 sav-fr@grohe.com	NL ☎ +31(0) 88-0030700 https://www.grohe.nl/nl/onze-service/contact.html	TR ☎ +90 216 441 23 70 groheturkey@grome.com
AUS ☎ 1800 080 055 customer.care@reece.co.m.au	FIN ☎ +358 (09)42451390 grohe@grohe.fi	NZ ☎ +64 09 573 0490 sales@robertson.co.nz	UA ☎ +380 (44) 5375273 info-ua@grohe.com
B ☎ +32 (0)2 899 3077 https://www.grohe.be/nl/be/onze-service/contact.html	GB ☎ +44 208 283 2840 info-uk@grohe.com	P ☎ +351 234529620 comercial-pt@grohe.com	USA ☎ +1 800 4447643 Grohetechnicare@lixil.com
BG ☎ +359 2 971 99 59 info-bg@grohe.com	H ☎ +36 (06)1 238-8045 info-hu@grohe.com	PL ☎ +48 (22) 5432640 biuro@grohe.com	VN ☎ (+84) 1800 6624 cskh@lixil.com
BR ☎ 0800 770 1222 falecom@lixilamericas.com	HK ☎ +852 2969 7067 info@grohe.hk	RI ☎ 0800-1-047-643 customer-care-indonesia@lixil.com	AL BIH HR KS ME MK SLO SRB ☎ +385 1 2911470 adria-hr@grohe.com
CAU ☎ +99 412 497 09 74 info-az@grohe.com	I ☎ +39 2 959401 info-it@grohe.com	RO ☎ +40 021 212 50 50 info-ro@grohe.com	CY M IL GR ☎ 800 11111 info@grome.com
CDN ☎ +1 888 6447643 info@grohe.ca	IND ☎ 18001024475 customer-care.in@grohe.com	ROK ☎ +82 2 1588 5903 info-singapore@grohe.com	UAE Q KWT BRN OM PK ☎ +971 4 4214557 grohedubai@grome.com
CH ☎ +41 44 877 73 00 info@grohe.ch	IS ☎ +354 515 400 jonst@byko.is	RP ☎ +63 2 89288000 service_center@wilcon.com.ph	KSA RL JOR IRQ ☎ +966 11 4551667 groheksa@grome.com
CN ☎ +86 4008811698 info.cn@grohe.com	J ☎ +81-3-6748-1180 info_grohe@blisspajapan.jp	RUS ☎ 8 800 200 00 49 service-ru@grohe.com	ET MA DZ TN NGR ☎ +202 226147988/98 grohecairo@grome.com
CZ ☎ +42 07 21 71 66 73 info-cz@grohe.com	KZ ☎ +7 775 007 05 27 service-kz@grohe.com	S ☎ +46 771 14 13 14 grohe@grohe.se	Far East Area Sales Office: ☎ +65 6311 3600 info@grohe.com.sg
DK ☎ +45 44 65 68 00 grohe@grohe.dk	MAL ☎ 1800 80 6570 customerservice.my@lixil.com	SGP RC ☎ +65 6311 3611 grohe@connectcentre.sg	Latin America: ☎ +52 818 3050626 info@lixilamericas.com
E ☎ +34 93 / 3 36 88 50 grohe@grohe.es	MX ☎ 01 800 839 1200 info@lixilamericas.com	SK ☎ +420 (2) 77004192 info-sk@grohe.com	

www.grohe.com

2022/04/12