

Tolerance, Unless	
Otherwise Stated. Is	
Above 0.5 to and including 6	±0.1
Excess 6 to and including 30	±0.2
Excess 30 to and including 120	±0.3
Excess 120 to and including 315	±0.5
Excess 315 to and including 1000	±0.8
Excess 1000 to and including 2000	±1.2

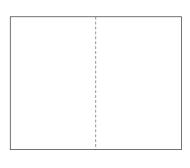

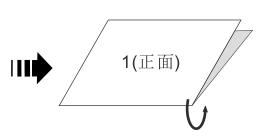



1. 说明书双面印刷完成 (297x210=A4)共1页

2. 说明书折叠完成

制作说明:

- 1. 说明书完成的尺寸: 148*210
- 2. 材料:80克的白色纸
- 3. 印刷说明: (详看图示) 4. 印刷颜色: 黑白
- 5. 印刷时, 内容准确, 清晰, 墨色均匀, 表面清洁。

				DESIGN	黄卓桓	2022.11.18	TITLE Instruction	ons
				CHECKED	刘丑群	2022.11.18	REF 英文说明书(PVD	
				APPROVED	种药	2022-11.18.	FFAS1301-101XXXBF0 FFAS1302-101XXXBT0	
				SCALE	MATERIAL	WEIGHT	DWG NO.	American
REV	DESCRIPTION	DATE	NAME				FF1-CN521K00566099	Standard


Test / Usage

1 Test

- * Move handle down into "OFF" position. Turn on supply angle valve to check all connections for leak.
- * Operate handle up and down, left and right to flush water lines thoroughly.



2 Usage

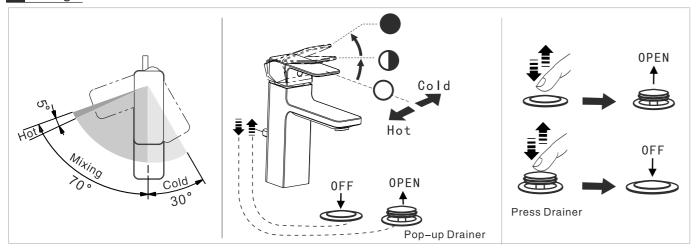


Trouble Shooting Guide

Trouble	Checkpoint	Contents	Action
Poor flow rate	Regulator	Check any impurities.	Remove all impurities.
	Angle valve	Check valve position.	Open it to full valve
	Flexible hose	Check if hose is twisted.	Untwist the hose.
Leakage	Cartridge packing	Check cartridge install.	When packing is damaged, replace the cartridge.
Leakaye	Hose junction	Check the connection.	Check the existence of packing and wind it up sufficiently
Deviant	Supply valve	Check if the water from supply valve is enough or not	Increase water supply
Temperature	Supply system	Check if the supply pipe connected correct or not	Connect the hot and cold water pipe correctly

- 4 -

Care & Maintenance

* If you want to change the parts or clean the inner of faucet, please follow the steps right to remove the parts.

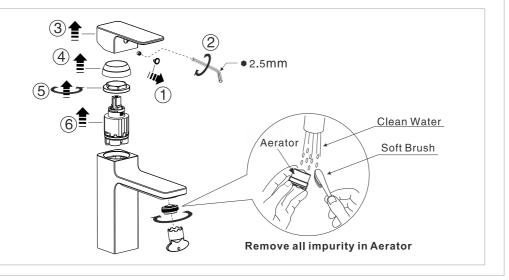



Attention: Please Leave the manual with the customer after installation is finished.

Acacia-Evolution


FFAS1301-101XXXBF0 FFAS1301-101XXXBT0

Acacia-Evolution SH SL Basin Mixer

FFAS1302-101XXXBF0 FFAS1302-101XXXBT0

Acacia-Evolution SH SL Vessel Mixer

XXX = AL0 / A00 / DA0 / GL0 / 440 / 500

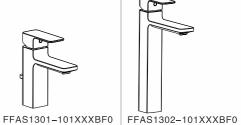

FFAS1301-101XXXBT0 FFAS1302-101XXXBT0



Thank you for selecting American-Standard - the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

- * American Standard always keep raising and improving the product design and performance, and reserve the right to modify the dimension and spefication. At this case, we will not inform you separately.
- * This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products.
- All instruction procedures must comply in strict accordance with applicable local plumbing and building codes

 
Pre-Installation Checks


- *Remove all impurity in pipes before beginning to avoid clogging. Connect faucet pipes correctly.
- * Check installation distances in the Dimension diagram to ensure correct installation.

Conditions for use

- * Recommended water pressure condition: 0.1~0.5Mpa.
- * Environment Temperature:1~55°C
- * Steam is not allowed to use.
- * The cold and hot water pipes must not be reserved.

When in the process of installation, Please grab the body. Do not grab handle only.



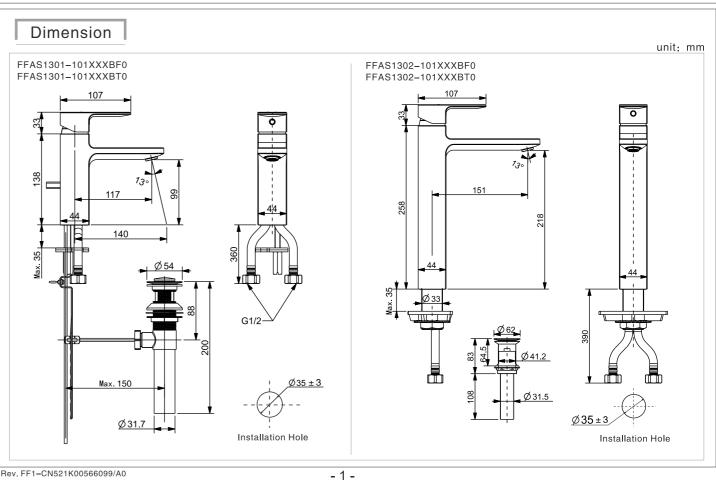

Rev. FF1-CN521K00566099/A0

