
Test / Usage

1 Test

- *Turn handle to "OFF" position. Open Water supply valve to check all connections for leakage; *Turn handle to "ON" position. Check the water flow.

2 Usage

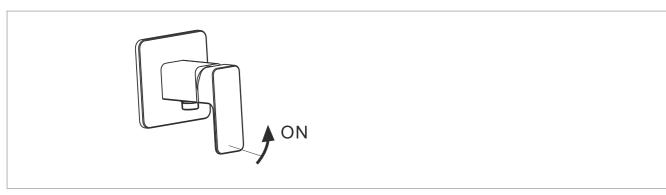


Trouble Shooting Guide

Trouble	Checkpoint	Contents	Action
	Shower	Check any impurities.	Remove all impurities.
Poor flow rate	Water Supply valve	Check water supply valve open position.	Open water supply valve to increase flowrate
Leakage	Cartridge	Check cartridge packing.	When packing is damaged, replace the cartridge.

Care & Maintenance

* If you want to do the maintenance for the faucet, please follow the below process.

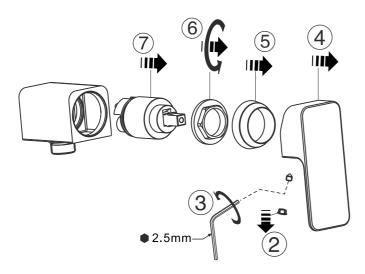



1. Close the Water Supply System




Attention: Please leave manual with customer post installation.

Acacia-Evolution

FFAS1326-7T1XXXBF0 FFAS1326-7T1XXXBT0

Acacia-Evolution Exposed Mono Shower Only Faucet

XXX = AL0 / A00 / DA0 / GL0 / 440 / 500

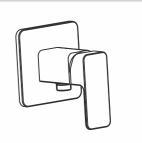



Thank you for selecting American-Standard - the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

- * American Standard always keep raising and improving the product design and performance, and reserve the right to modify the dimension and spefication. At this case, we will not inform you separately.

 * This installation instruction sheet is for your reference only, the dimension and specification is subject to the actual products.
- All instruction procedures must comply in strict accordance with applicable local plumbing and building codes


Pre-Installation Checks


- *Remove all impurity in pipes in order to avoid clogging before installation.
- *Check installation dimensions in order to install it correctly.

Conditions for usage

- * Recommended water pressure: 0.1~0.5Mpa.
- * Environment Temperature:1~55°C
- * Steam is not allowed.

During installation of the faucet, Please grab the body. Do not grab handle only.

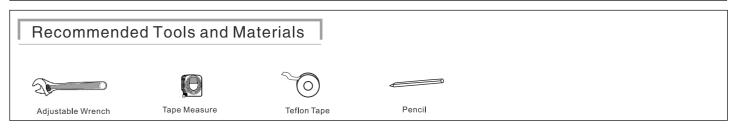

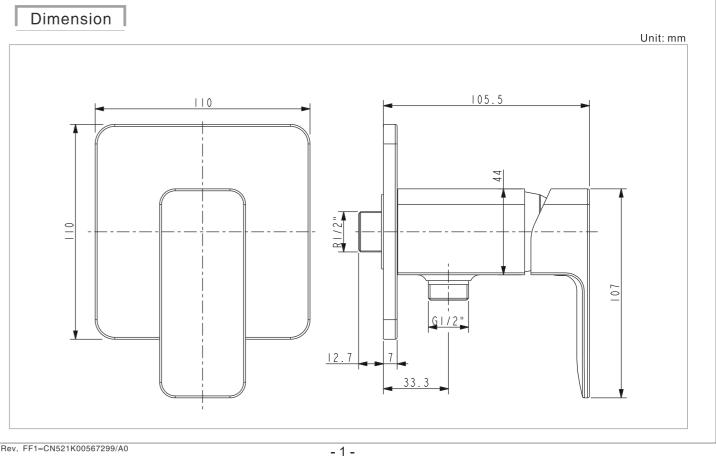

Rev. FF1-CN521K00567299/A0

