


# 臻美石独立式浴缸

## Zenistone Floor–Standing Tub

### 安装/使用说明书

### INSTALLATION & OPERATION INSTRUCTIONS

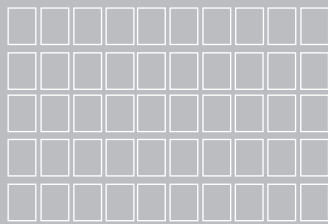

感谢您选购美标洁具 – 拥有百年优质水准的产品

为保证安装顺利，请在进行安装前细阅以下指南

\* 美标公司一贯奉行不断提高和改善其产品设计与性能的政策，并保留对其产品规格更改的权力，届时，恕不另行通知。

\* 本指南仅供安装和使用作参考，产品以实物为准。

所有的安装程序必须严格遵从当地的卫浴和建筑法规条例。

#### 安装前注意事项

- 1、请仔细阅读此说明书以熟悉所需要的工具、材料及安装顺序。遵循适合您的特定安装要求的各项内容，避免昂贵的损失。除了要正确安装外，还应阅读操作及安全说明。
- 2、请根据相应的浴缸安装尺寸参考图预留相应安装空间，预排地漏和供水管。
- 3、产品说明书包括重要的安装、清洁及保养方面的内容，请把这些资料交给用户阅读。
- 4、臻美石浴缸比较重，请确保地面为您的浴缸提供足够的支撑。臻美石浴缸的重量和用水量已经标注在安装尺寸参考图上。
- 5、请确保安装地面的水平和平整。
- 6、安装前检查浴缸是否损坏。本浴缸质量上乘，但在搬运或安装过程中，可能会遭到损坏，请仔细检查。施工期间将所有的材料都留在箱内，以防止损坏。

#### 推荐的工具和材料

##### A、工具

- \* 管道扳手
- \* 刻度尺
- \* 安全鞋
- \* 螺丝刀
- \* 钳子
- \* 直角尺
- \* 水平仪
- \* 安全眼镜
- \* 多用工具刀
- \* 活动扳手


##### B、材料

- \* 管道用油灰
- \* 墙面保护膜（如需要）
- \* 密封硅胶
- \* 建筑粘胶（选用）
- \* 浴缸保护套


#### 浴缸安装

- 1、浴缸排水器在出厂前已为您安装在浴缸上，在浴缸就位前请注水再次仔细检查各接头处是否有渗漏。疏忽导致的损坏，不能获得工厂的保修。
- 2、在安装的过程中，要在浴缸表面盖上保护套，小心不要划伤浴缸表面。
- 3、浴缸的摆放位置固定后，提起浴缸，把排水软管插入你的地漏，并用硅胶密封软管与地漏之间连接处。请保持软管留有一定的长度，以便于以后维修浴缸。


#### 排水器使用

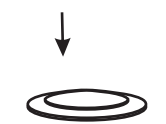

弹压式排水器

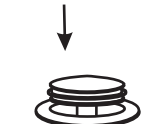

弹压式排水器



#### 维护与保养

- 1、浴缸表面尽量保持干燥

每次使用完浴缸后，应及时清洁浴缸。因为水中含有大量的漂白剂和水垢，停留时间过久后，会污染浴缸颜色，影响美观。

- 2、请不要将高温物体直接或长久搁放在臻美石浴缸上

虽然臻美石浴缸能耐热，但过高的温度还是会伤害浴缸表面，对浴缸内的水或正在注入浴缸的水，请把水温控制在50℃以下。

- 3、刮伤、一般的化学污点、灼伤或烧伤以及小撞击所造成的痕迹

对于经常使用的臻美石浴缸，若由外部因素导致表面出现刻痕、刮伤与烧伤时，用户可以在现场用美标指定的1000号砂纸来水磨修复，因为臻美石浴缸采用一体式浇注成型，里外如一。

- 4、禁止烈性化学品与浴缸表面接触

臻美石具有持久抗伤害能力，但仍需避免与烈性化学品接触，例如去油漆剂、金属清洗剂、炉灶清洗剂。不要接触亚甲基氯化物、丙酮（去指甲油剂）、强酸清洗剂

若不慎与以上物品接触，立即用大量肥皂水冲洗人造石表面。

若沾上指甲油请用不含丙酮的清洗剂（如：酒精）清洗，再用水冲。

- 5、不要让过重或尖锐物体直接冲击表面。

- 6、不能在浴缸中浸泡易脱色物品，以免浴缸染色。

- 7、对于较严重损伤或产品需要整体翻新

用户可遵照下列步骤进行操作：

- 1）用清水清洗表面，确保没有灰尘。

- 2）用美标提供的600号水磨砂纸打磨表面，再用1000号砂纸打磨表面使其光滑。


- 3）用干布将水擦去。

- 4）用正品的“碧丽珠”喷在打磨过的浴缸表面，并用干棉布来回擦拭，使表面恢复光泽。

注意：打磨时必须是水磨，不可以干磨。打磨的砂纸型号必须是由美标提供的，若使用完或者丢失，请到美标指定的经销商购买。

- 8、尽量避免浴缸溢水管道被堵塞

浴缸上端的方形口为浴缸溢水口，使用过程中应尽量避免杂物进入管道内。如不慎被堵塞，可拆下排水器，用水冲洗溢水管道即可。

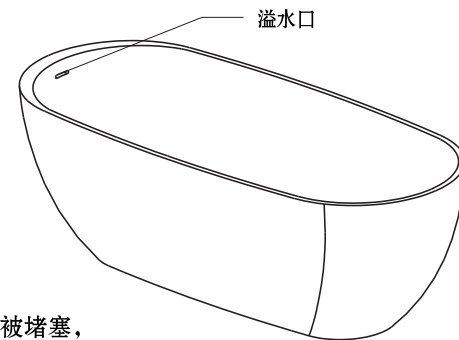

#### 关于质保

为保障您的合法权益，请您联系购买商家或经销商索取电子质保卡，或微信关注“美标品质服务”公众号，通过“我的美标”→“质保信息”→“验证身份”后，在线申请电子质保卡。

若有任何疑问，可联络离您最近的美标公司售后服务中心，或拨打美标全国免费电话进行咨询。

全国免费电话：400-820-3191 (固话/手机)

800-820-3191 (固话)

美标官方售后微信账号：美标品质服务

(Only for China Market)  
(仅限中国市场)




**安装者注意：**  
安装完成后，请将此说明书留给用户。

臻美石独立式浴缸  
Zenistone Floor–Standing Tub

安装/使用说明书

INSTALLATION & OPERATION INSTRUCTIONS

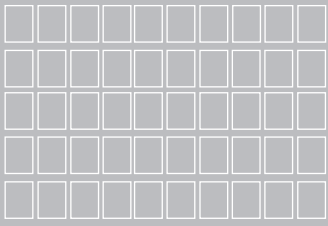

- \* Thank you for selecting American Standard,products which have the benchmark of fine quality for over 100 years.
- \* To ensure that your installation proceeds smoothly,please read this instructions carefully before you begin.
- \* Please unpack carefully and check if the product is in good condition.
- \* All information is base on the latest product information available at the time of publication.  
American Standard reserves the right to make changes in product characteristics,packing, or availability at any time without notice.

BEFORE YOU BEGIN

- 1、Please read these instructions carefully to familiarize yourself with the required tools,materials, and installation sequences.  
Follow the sections that pertain to your particular installaiton. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- 2、Please provide adequate available space for the bathtub unit in accordance with rough-in.  
Arrange the location of drain in advance.
- 3、These instructions contain important care,cleaning,and warranty information,  
**Please leave these instructions for the consumer.**
- 4、Zenistone bathtub is heavy.Please make sure the floor provides adequate support for the bathtub.  
With its weight and water consumption marked in the roughing-in.
- 5、All installations must comply with council and local authority by-laws.It is the responsibility of the installer to ensure that waste is made watertight by means of silicone sealant or caulking compound.
- 6、Observe all local pluming codes. Install the unit to a level and flat floor.
- 7、All American Standard's bathtubs have been manufactured with sophisticated craftsmanship.  
However,please inspect for any possible damage that may have occurred in transit.  
Leave all materials in crate during construction to prevent damage.  
Damage occurred during transit shall not be covered by warranty.

INSTALLATION REQUIREMENTS

A、Tools Required

- \* Adjustable pipe wrench
- \* Square
- \* Adjustable wrench
- \* Level
- \* Safety shoes
- \* Pliers
- \* Safety glasses
- \* Utility knife
- \* Screwdriver
- \* Rule

B、Materials Required

- \* Plumbers putty
- \* Wall coverings (as necessary)
- \* Silicone sealant
- \* Construction adhesive (optional)
- \* Protective covering for bathtub

INSTALL THE BATHTUB

- 1、The drain has been installed onto the bathtub before it leaves factory. Fill the bathtub with water before the bathtub is securely positioned so as to check the supply connections for leaks. American Standard shall not be liable its warranty or otherwise for damage caused by negligence.
- 2、Position a protective covering or similar material in the bottom of the unit.  
Be careful not to scratch the bathtub surface.
- 3、Locate the bathtub in the proposed position. Lift the bathtub by about 30cm from the floor.  
Please insert the drain hose to the floor drain, and seal the connection of hose and the floor drain with silicone.  
Please set apart some spare length of the hose, in case of future bathtub maintainance.

DRAIN INSTRUCTION



CLEANING AND CARE

1、Keep the surface dry

Water contains large amounts of bleaching agents and incrustation. Therefore, it will affect the color and appearance of the bathtub of it stays on the surface for a long time.

2、Do not put objects with high temperatures on the bathtub directly or for along time

- Although Zenistone bathtub is heat-resisting, its surface will still be damaged under too high a temperature.
- Please control water temperature of the water in the bathtub or the water being poured into the bathtub under 50℃.

3、Spots caused by scratching ,common chemicals ,burning and slight knocks.

- Spots caused by nicks, scratching and burning are unavoidable for frequently used Zenistone bathtub.  
However, since Zenistone is solid from inside to outside, the spots can be removed by using the following methods:
- Spots caused by scratching, common chemicals, burning and slight knocks can all be removed by using Scotch brand cleaning pad. Slight sanding is necessary for severer damages, and the following steps are needed:  
1)Wash the surface with clean water to ensure it is dustless.  
2)Use 600# waterproof abrasive paper to sand the surface, and then use 1000# abrasive paper to polish the surface.  
3)Wipe away the water with a piece of dry cloth.  
4)Moisten the surface first to avoid dirt.

**Note:Must keep the surface wet while sanding it.**

4、Keep the surface away from strong chemicals

- Zenistone is damage-resisting, but strong chemicals are not allowed to contact its surface. Paint-removing detergents, metal cleaning detergents, stove cleaning detergents, methylene chloride, acetone(like nail enamel remover) and strong acid detergents shall be avoided.
- If the surface contacts the above-mentioned detergents, please immediately wash it with soap water.
- If the surface is spotted by nail enamel, please clean it with acetone free detergents and then wash it with water.


5、Protect the surface from being knocked by overweight or sharp-ended objects.

6、Product renovation

In case the bathtub surface is scratched or tarnished due to long time of use, please ask professionals to polish the surface,which will restore its original look.

7、Keep the overflow clean

If the overflow jam by hair etc. Please wash it with water.

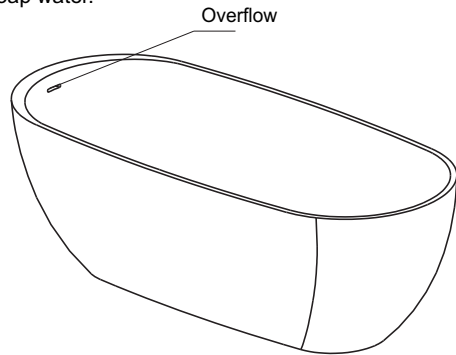

BATHTUB LIMITED WARRANTY

American Standard warranty to the original consumer purchaser that it will, at its option, repair or replace any of its plumbing products found by it to be defective under normal use and maintenance within a period of **three-years** for tub ,while that of accessory shall be **one-year** from the date of purchase.

(If there is no the same model,we will replace it with the similar model ,American Standard reserve the right)

This limited warranty **DOES NOT COVER** the followings:

- 1.Defects or damage arising from shipping, installation, alterations, accidents, abuse, misuse, lack of proper maintenance and use of other than genuine American Standard replacement parts, in all cases whether caused by a plumbing contractor, service company, the owner or any other person.
- 2.Deterioration through normal wear and tear.
- 3.Expense of normal maintenance-periodic replacement of washers, seals, etc.
- 4.Postage or shipping costs from returning products for repair or replacement under this limited warranty and labor or other costs incurred in connection with product removal or installation under this limited warranty.
- 5.**Any liability for consequential or incidental damages, all of which are hereby expressly disclaimed, or the extension beyond the three-years duration of this limited warranty of any implied warranties, including hose of merchantability or fitness for purpose intended.**(Some jurisdictions do not allow limitation on how long an implied warranty lasts, or the exclusions or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you)
- 6.Responsibility for compliance with local region requirements.(Since local code restrictions on the installation or use of a specific product) Requests for service under this limited warranty should be addressed to your local American Standard authorized distributor.

This limited warranty is our exclusive warranty. It gives you specific legal rights, but you may also have other rights which vary from province to province.



Attention Installer :  
Leave this information to the customer  
after installation is completed